

Planer

When to use:

This tool is used as a way to make a board true on both faces. This is a useful tool for cupped boards, and is also a good tool to create a smooth surface to start sanding from. Maximum width is 13".

This tool is often used for cleaning up panels that have been glued together. Be sure to remove any excess glue before use.

Safety:

1. Boards must be no shorter than 12" to use this tool.
2. Boards need to be supported as they exit the other side of the planer
3. Remove material in reasonable increments. Removing too much material at once will cause binding and cause the tool to not work correctly
4. You should only be taking off 1/16 of an inch at a time with this tool, any more than that will result in damage of the tool, wood, and potentially injury
5. This tool is only used to plane the wide side of a board. **Do not** stand wood on end and pass it through the planer.

Procedure:

1. Attach dust collection
2. Adjust the cut depth of the blade.
3. I generally bring the blade down to the depth of my board for the first pass and then move them down 1/4 turn
4. Face the previously jointed edge down on the planer belt
5. Turn on dust collection
6. Turn on machine
7. Pass the board through the planer until the results you desire are achieved 1/4 turn at a time
8. This tool should not be used to "sand" the board
9. Turn off machine and dust collection
10. Clean up tool and surrounding space

Tool specifications

Make	Grizzly/Shop Fox
Model	W1877
Manufacturer Product Page	https://www.grizzly.com/products/shop-fox-13-benchtop-planer-w-spiral-type-cutterhead/w1877
Max Depth	6 inches
Max Width	13 inches
Voltage	110V
Manual (pdf)	w1877_m.pdf
Parts List	w1877_pl.pdf
Specifications	w1877_ds.pdf

Revision #4

Created 11 January 2024 01:20:25 by Grant Dobbe

Updated 27 May 2025 20:11:05 by Grant Dobbe